

TECHNICAL ASSISTANCE



Having trouble?
Give us a call!

Our customer support team is ready to answer any questions you might have about your new product.

Most setup or operation problems can easily be solved with a quick call to our friendly staff.

Be sure to contact us for help before you consider returning the product.

1-800-888-4491

or

www.sdirect.com

Installation and Maintenance

 
Installation

1. Remove the unit and all packing materials from the carton. You should save the packing materials in case unit needs to be returned for service. If you do not wish to save the materials, please dispose of them properly.
2. Place the unit on a stable, level surface, close to an AC outlet, out of direct sunlight, and away from sources of dust, dirt, heat, water, moisture, vibration, and strong magnetic fields.

"Sure Alarm" Battery Backup Installation

The Battery Low Indicator flashes when there is not enough power to run the backup. It is recommended that 2 "AAA" batteries be installed into the unit, as directed below, to activate the "Sure Alarm" battery backup feature. In the event that the AC power cord is disconnected or a power failure or other interruption occurs, the "Sure Alarm" system will maintain clock and alarm settings for the life of the batteries, ensuring that the alarm will sound at the set time (Note: while operating on battery power, all set alarms will sound as a buzzer). When power is restored, the clock will cease using battery power, and will again operate on AC power.

1. Use a Phillips screwdriver to remove the battery compartment door.
2. While unit remains plugged into an AC outlet, install 2 "AAA" batteries (alkaline batteries are recommended for longer life) into the battery compartment, making sure that the + and - polarities match the diagram inside the compartment. Do not replace batteries without the unit connected to AC power or you will lose all clock settings.
3. Close the battery compartment door and tighten the screw. Gently return the clock radio to its upright position.

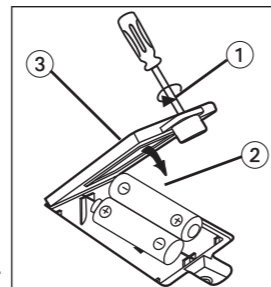

Battery Compartment

Maintenance

1. Place the unit on a level surface away from sources of direct sunlight or excessive heat.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface of the case.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

 
 
This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all the safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warning, and always follow the instructions on the unit and in the instruction and service manuals.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance itself.
5. **Grounding or Polarization** – This product is equipped with a polarized alternating current line plug. (a plug having one blade wider than the other) As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug by forcing the plug into the outlet.
6. **Power-cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
8. **Non-Use Periods** – The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into an enclosure through openings.
10. **Attachments** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
11. **Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
12. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
13. **Damage Require Service** – The unit should be serviced by qualified service personnel when:
 - A. The power supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit does not appear to operate normally or exhibits a marked change in performance.
14. **Servicing** – The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
15. **Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
16. **Antenna** – Do not connect to an external antenna.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The symbols above are located at the back of the cabinet.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

ATTENTION: Pour éviter les choc électriques. Introduire la lame la plus large de la fiche dans la borne correspondante de la prises et pousser jusqu'au fond.

 
FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

TIMEX®

Model T1307
**Preset Tuning
Alarm Clock Radio with
MP-3 Line-in**

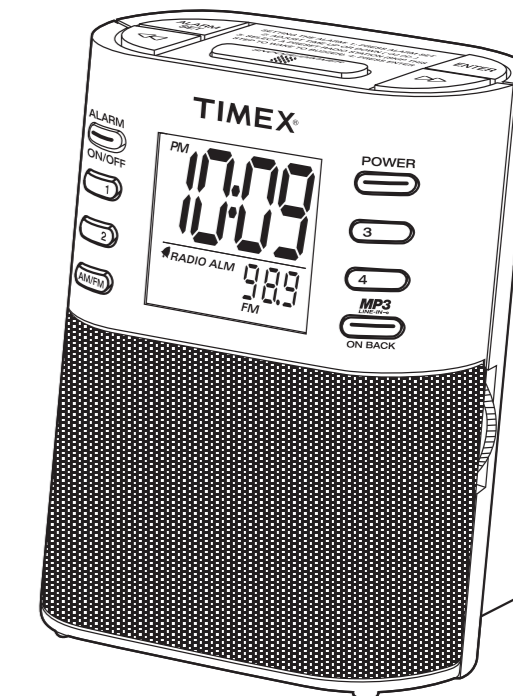


For additional information, online registration, and exclusive special offers visit our website:

www.timexaudio.com


For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.
Para instrucciones en Español, llame al 1-800-888-4491.

Controls and Indicators

 
TOP VIEW

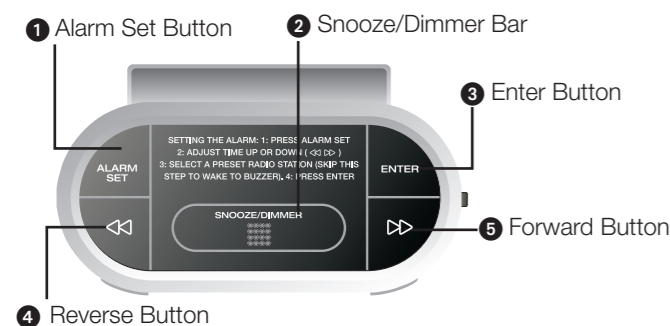

FRONT VIEW

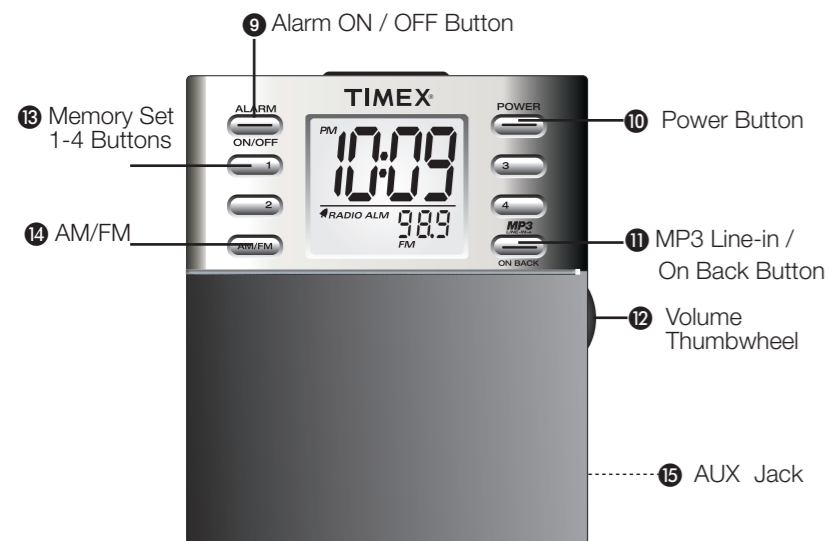 


Display with Indicators

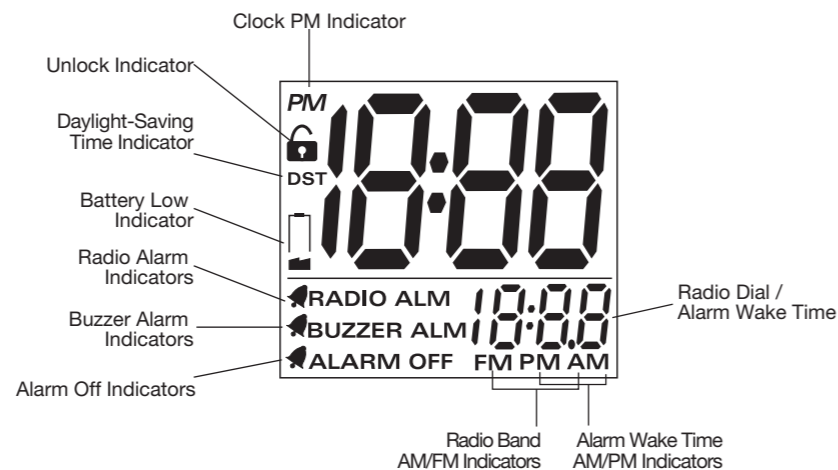 

Setting the Clock

Auto-Set and Manual Time and Date Settings

 This model is equipped with the Auto-Set feature, meaning that the time and date have been programmed at the factory and will already be set when you first plug the model in. Auto-Set is programmed for Eastern Standard Time. To change your time zone setting, perform steps below.

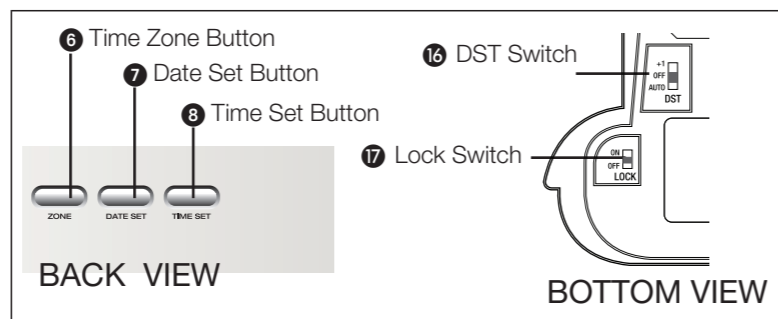

- Slide the **17 On/Off Lock switch** to 'Off' on bottom panel. The unlock indicator will appear on the display.
- Press the **6 Time Zone Button**, the current Auto-Set Time Zone will flash. Press the **4 <<** and **5 >>** **Buttons** to select your time zone. The display will show each zone's current time setting. There are seven zones

Auto-Set Time Zones

ATL : Atlantic Standard Time
EAS: Eastern Standard Time
CEN: Central Standard Time
MTN: Mountain Standard Time
PAC: Pacific Standard Time
ALS: Alaska Standard Time
HAI: Hawaii Standard Time

- Press the **3 Enter Button**.

Manual Time and Date Settings

- To change the time setting, press the **8 Time Set Button**. The clock display will flash. Press the **4 <<** and **5 >>** **Buttons** to set the time. Hold a button for a few seconds to set the time rapidly. Be sure to set the correct AM/PM time, shown by the PM indicator.
- Press the **3 Enter Button**. The clock will beep twice and the display will stop flashing.
- Press the **7 Date Set Button**. The current year setting will flash on lower right screen. Press **4 <<** and **5 >>** **Buttons** to adjust. Press **7 Date Set Button** again then current month/date will flash. Press **4 <<** and **5 >>** **Buttons** to adjust then press the **3 Enter Button** to exit.

Daylight-Saving Time

Slide **16 DST Switch** on bottom panel.

- Depending on your living area and if Daylight Saving Time (**DST**) is observed, you can manually switch **DST** on (+1), **OFF** or use the **AUTO** setting.
- To manually turn on the **DST** function, just set the **16 DST Switch** to +1. The **DST** icon will appear and the time will advance 1 hour.
- To manually turn **OFF** the **DST** function, set the **16 DST Switch** to **OFF**. The time will go back 1 hour.
- Set the **16 DST Switch** to **AUTO** to have the unit automatically adjust the time at the beginning and end of Daylight Saving Time each year.

Programming the Preset Radio Stations

This unit has four Radio Preset Buttons for guests to find local stations.

- Press the **10 Power Button** to turn on the radio.
- Set the AM or FM band by pushing the **14 Radio Band Button**.
- Press either the **4 <<** and **5 >>** **Buttons** to find the station. Hold a button for a few seconds to scan the dial quickly.
- Press and hold a Radio Preset Button to set the station. The unit will beep twice. The Button on the right end is **11 MP-3/Aux Line-in Button**.

Note: Extend the wire antenna for better FM reception.

- Slide the **17 On/Off Lock Switch** to 'On' on bottom panel.

General Operating Instructions

Setting and Operating the Alarm

- Press the **1 Alarm Set Button**. The wake time on the display will flash.
- Press the **4 <<** and **5 >>** **buttons** to set the alarm time. Hold a button for a few seconds to advance the time quickly.
- For wake to buzzer, press the **3 Enter Button** to set the alarm wake time. The unit will beep twice and the Buzzer Alarm Indicator will appear, showing that the alarm will sound at the set time.
- For wake to radio, press one of the Radio Preset Button then **3 Enter Button** to set the alarm wake time. The unit will beep twice and the Radio Alarm Indicator will appear, showing that the alarm will sound at the set time.
- When the alarm sounds, press the **2 Snooze / Dimmer Bar** for a 9-minute Snooze time, or press the **9 Alarm ON/Off Button** to shut off the alarm. The Alarm Off Indicator will appear.

Note:

- Pressing **9 Alarm ON/Off Button** while alarm is sounding, turns off alarm. The **9 Alarm ON/Off Button** also selects alarm mode.
- While setting the alarm, if the **11 MP-3 / Aux Line-in Button** is pushed, the button push will be ignored and buzzer alarm will be activated after pushing the **3 Enter Button**.

Playing the Radio

- There are two ways to turn on the radio. Press one of the Radio Preset Buttons to listen to one of the preset stations, or press the **10 Power Button**. The radio frequency will appear on the display.
Note: If 'AU' appears on the display, press one of the Radio Preset Buttons to listen to the radio.
- Set the AM or FM band by pushing the **14 Radio Band Button**.
- Press either the **4 <<** and **5 >>** **Buttons** to find the station. Hold a button for a few seconds to scan the dial quickly.
- Turn **12 Volume Thumbwheel** to adjust volume level.
- Press **10 Power Button** to Off to shut off radio.
Note: Extend the wire antenna for better FM reception.
 - MP-3 Player may cause interference to the radio reception. If interference occurs, turn off and unplug MP-3 Player from the radio.
 - Keep Fluorescent lamps away from unit, may cause interference with radio.

Playing the MP-3 / Aux Line-in

- Connect your CD / MP-3 Player or other devices to the MP-3 / Aux Line-in plug on back panel.
- Press the **11 MP-3 / Aux Line-in Button**. 'AU' will appear on the display.
- Turn **12 Volume Thumbwheel** to adjust volume level.
- Press **10 Power Button** to Off to shut off unit.
Note: To avoid distortion of sound, always set the volume level of the auxiliary device to suitable position, and adjust the desired volume level from the radio.

Adjusting the Display Backlight

This alarm clock radio features an adjustable display backlight, with dim, medium, and bright settings. To select a backlight setting, press the **2 Snooze / Dimmer Bar** until desired brightness is reached.